

Careful Layout for Perfect Walls



Everything from rafters to kitchen cabinets fits better when you get the walls square and the studs in the right places

BY JOHN SPIER

Framing walls is one of the most fun parts of building a house. It's fast, safe and easy, and at the end of the day, it's satisfying to admire the progress you've made. Before cranking up your compressor and nail guns, though, you need to think through what you're going to do. You need to locate every wall precisely on the subfloor, along with every framing member in those walls (photo above).

Layout starts in the office

For one of our typical houses, layout and framing for interior and exterior walls start in the office a few days before my crew and I are ready

to pick up the first 2x6. First, I review the plans carefully and make sure that all the necessary information is there.


I need the locations and dimensions of all the rough openings, not only for doors and windows but also for things such as fireplaces, medicine cabinets, built-ins, dumbwaiters and the like. I also make sure the plans have the structural information I need for layout, such as shear-wall and bearing-wall details and column sizes.

At the site, one of Spier's many corollaries to Murphy's Law is that errors never cancel each other out; they always multiply. If the floor is anything but straight, level, flat and square, the walls are going to go




SETTING THE STAGE FOR THE REST OF THE HOUSE

For the most precise wall layout, plot a series of rectangles that includes every wall. The larger the rectangle, the more accurate the wall position. Begin with the longest walls, and lay out the largest rectangle using diagonal measurements (photo below). Working off established lines and square corners, work down to the smallest rectangle.

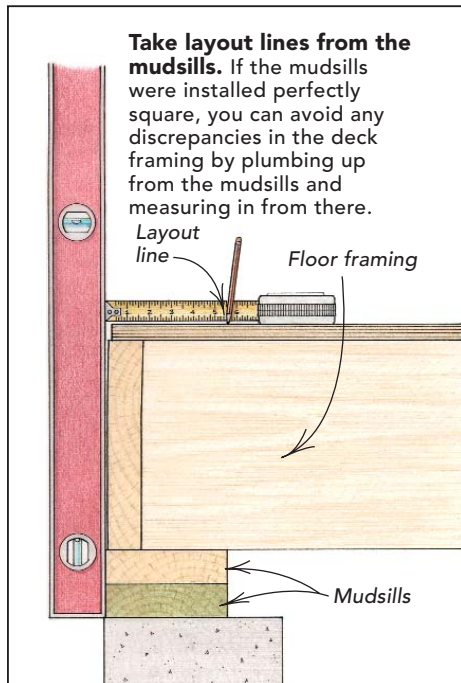


Equal diagonal measurements mean a square layout. After snapping chalklines for the longest parallel walls, the author takes corner-to-corner measurements to make sure the corners are square for a perfect rectangle.


1. Starting with the longest walls, measure and square the largest rectangle.

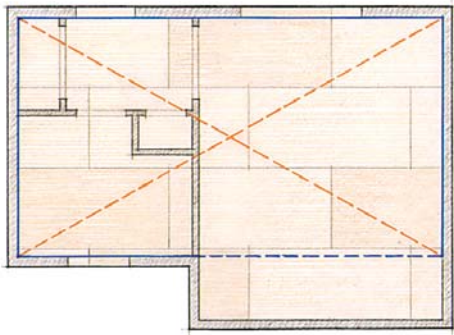


2. Working off those lines, plot the rectangle that includes the jog in the wall.

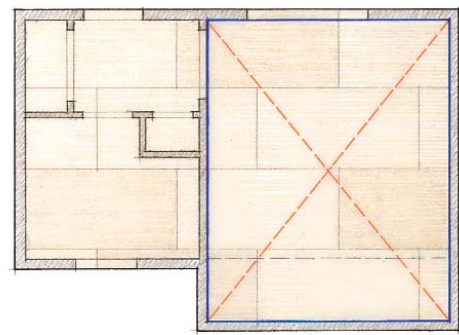

3. Now measure off the outside and form a rectangle for the longest interior wall.

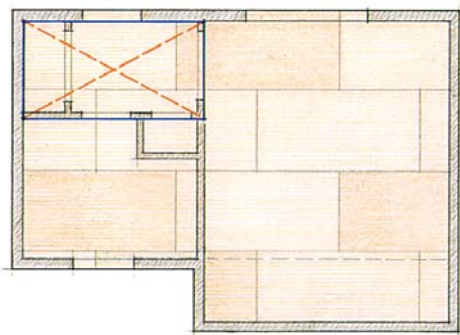

4. Last, form rectangles for the remaining interior walls.

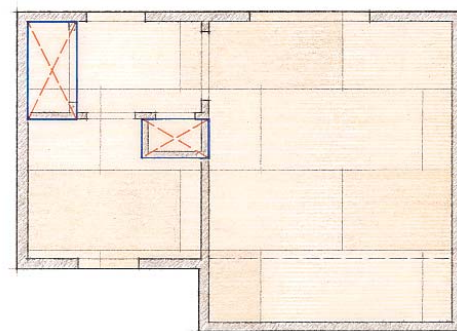

downhill (or uphill) from there. So before you get to layout, do whatever it takes to get a good floor, especially the first: Mud the sills, shim the rims, rip the joists. Sweep off the subflooring, and avoid the temptation to have a pile of material delivered onto it.

Snap chalklines for the longest exterior walls first

I've learned over the years that it's best to snap the plate lines for the entire floor plan before building any of it. Problems you didn't catch on the prints often jump out when you start snapping lines.

When framing floors, I take great care to set the mudsills flush, square and in their exact locations. Because the edges of floor framing and subflooring are not always perfect, though, I use a level to plumb up from the mudsills and establish the plate lines, measuring in the stock thickness from the level (top drawing, p. 53). I generally start with the longest exterior walls and the largest rectangle in the plan. When I have the ends of the longest wall located, I snap a line through the marks.


Once I've established the line for the first wall, I move to the parallel wall on the opposite side of the house. I measure across the floor from the first line to the opposite mudsill (again using a level to plumb up from the mudsill to the floor height) at both ends; if the lengths differ slightly, I use the larger measurement. I snap through these points, which gives me two parallel lines representing the long sides of the largest rectangle (bottom drawings, p. 53). It's okay if the plates overhang the floor framing by a bit, but I watch for areas that might need to be shimmed or padded—for instance, where a deck ledger needs to be attached to the house.

Establish the right angles

I locate three corners by measuring in from the mudsills. The fourth corner I locate by duplicating the measurement between the first and second because I need sides of equal lengths to create a rectangle. I check this rectangle for square by measuring both its diagonals (photo right, p. 53). If I've done everything right so far, the diagonal measurements should be very close, perhaps within $\frac{1}{4}$ in. I shift two corners slightly if I need to, making sure to keep the lengths of the sides exact until the diagonals are equal. Now, perpendicular lines are snapped through the corners, completing the rectangle.

Because I started arbitrarily with one long wall, I may find now that the rectangle, while being perfectly square, is slightly askew from the

foundation and floor. Also, some of the complicated foundations that I work on can have wings or jogs that are slightly off. If I can make everything fit better by rotating the rectangle slightly, I take the time to do it now.

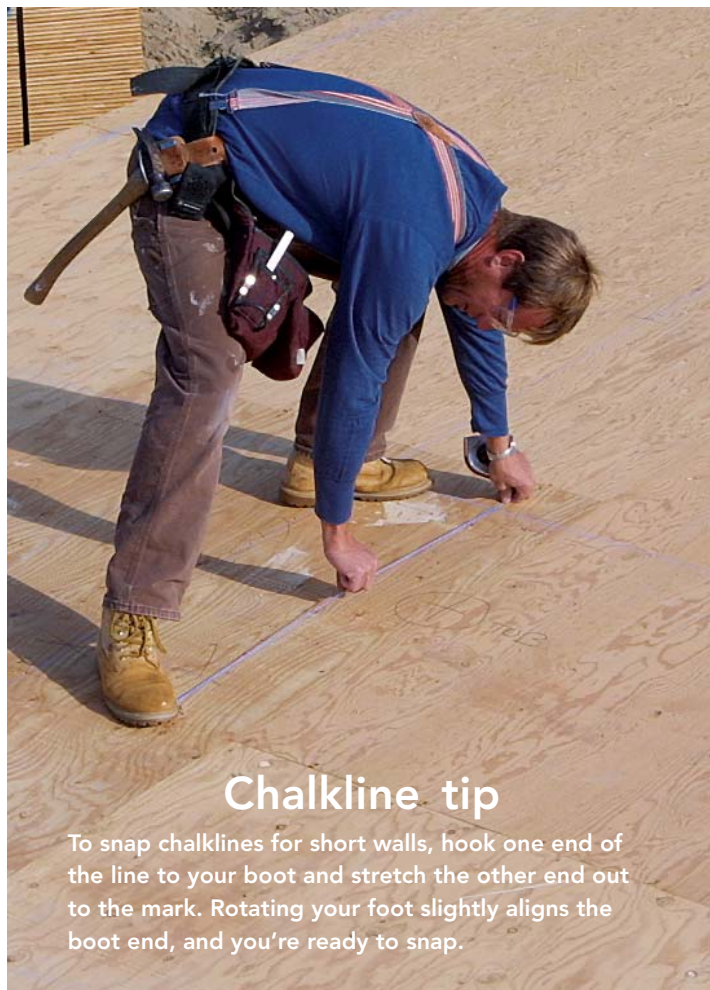

Chalkline tip

To snap chalklines for short walls, hook one end of the line to your boot and stretch the other end out to the mark. Rotating your foot slightly aligns the boot end, and you're ready to snap.

Smaller rectangles complete the wall layout

With the largest part of the plan established, I lay out and snap whatever bays, wings and jogs remain for the exterior walls. I use a series of overlapping and adjacent rectangles, which I can square by keeping them parallel to the lines of the original rectangle. I again check the right angles by measuring the diagonals.

Often, the plan calls for an angled component such as a bay. If these components are at 45° , I lay them out from right angles by forming and diagonally bisecting a square. For angles that are not 45° , I either can trust the architect's measurements on the plans, or I can use geometry and a calculator. The latter method is more likely to be accurate.

When all the exterior walls have been laid out, I turn my attention to the interior walls. Again, I start with the longest walls and work to the smallest, snapping lines parallel and square to the established lines of the exterior walls. I snap only one side of each plate, but I

mark the floor with an X here and there to avoid confusion about where the walls will land. I also write notes on the floor to indicate doors, rooms, fixtures, bearing walls and other critical information.

It's a rare architect who dimensions a plan to the fraction of an inch with no discrepancies, and an even rarer builder who achieves that accuracy. So first, I lay out critical areas such as hallways, stairwells, chimneys and tub or shower units, and then I fudge the rest if I need to.

One last critical issue when reviewing the plans and laying out walls is watching for elements of the design that need to stay symmetrical. If the foundation contractor made one wing a bit wider than another, you don't want to build all three floors before realizing that the ridge-lines of the two wings needed to match up. Make sure symmetrical elements are aligned at the first layout stage.

Make plates from the straightest lumber

While I snap the walls, the crew is busy cutting and preparing material from the piles of stock. I have them set aside a pile of the straightest lumber. With the chalklines all snapped and with this material in hand, I start cutting and laying out the plates (top and bottom mem-


ALIGN FRAMING FROM MUDSILLS TO ROOF FOR THE STRONGEST HOUSE



Plates on deck. When wall positions are laid out, cut all the top and bottom plates (the long horizontal members) for the exterior walls, and place them on their layout lines.



Stud layout is always taken from the same two walls. One crew member holds the tape at wall offset while the other marks the stud position (photo above). Even when there is a break in the wall, the layout is pulled from the same place to keep all the framing aligned (photo right).

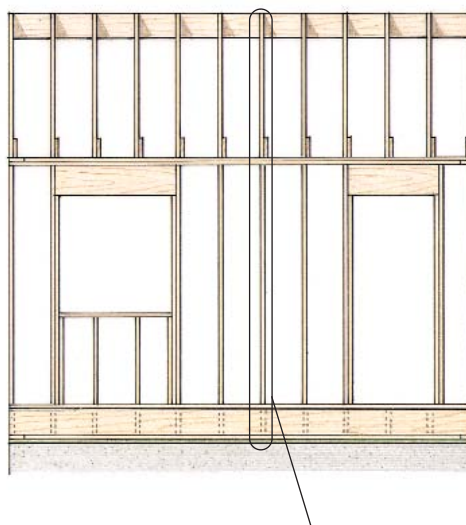

Common layout keeps framing members in line

Pulling the layout from the same point for every level of the house lines up the joists, studs and rafters for a stronger house that's easier to finish.



bers) for the exterior walls (top photo above). In this step of layout, we set the plates side by side on the layout line, and every wall-framing member is located and labeled. With this information, we assemble the walls on the floor, then raise them into place. I often call out measurements and have someone cut and hand up the material to keep mud, snow and sawdust off the floor during this crucial phase.

As a rule, we plate the longest exterior walls to the corners of the house, and the shorter walls inside them. This approach sometimes needs to be modified—for instance, to accommodate structural columns, hold-down bolts or openings adjacent to corners. Sometimes an obstruction or a previously raised wall dictates which wall can be built and raised first. The goal here is to build and raise as many walls




as possible in their exact positions, especially the heavier ones. Moving walls after they're raised is extra work and no fun.

Before starting any framing, I established a common-stud layout for the entire structure based on two long perpendicular walls from which layout for the rest of the house framing can be measured (drawing above). This common layout keeps joists, studs, cripples and rafters throughout the house vertically aligned from the foundation to the ridge, which makes for a strong, straight and easily finished structure. We use this common layout to locate butt joints between pairs of plates because code and common sense dictate that these joints land on a stud or a header.

As my crew and I measure and cut the pairs of wall plates, we lay them on edge along their layout lines, sometimes tacking them to-

FRAMER'S SHORTHAND: WHAT THOSE LITTLE MARKS MEAN

When the framing members are marked, a full-length stud is indicated by an X. A trimmer or jack stud is a T or J, and a C or X indicates a cripple (a short framing member below a sill or above a non-structural header). Other framing such as partition posts and corner posts are labeled along with any special framing instructions.

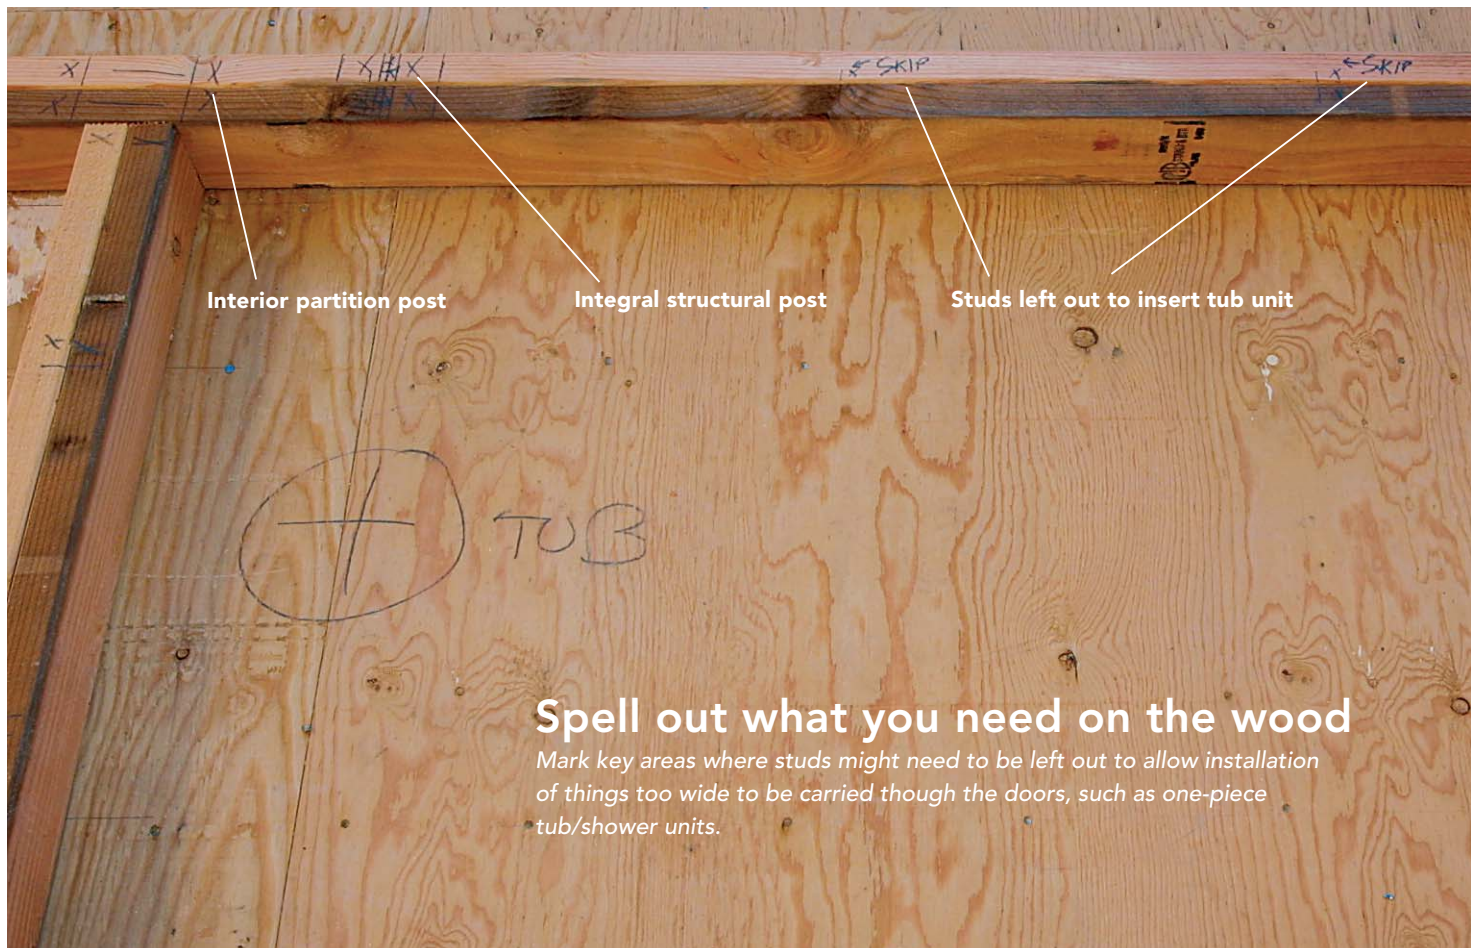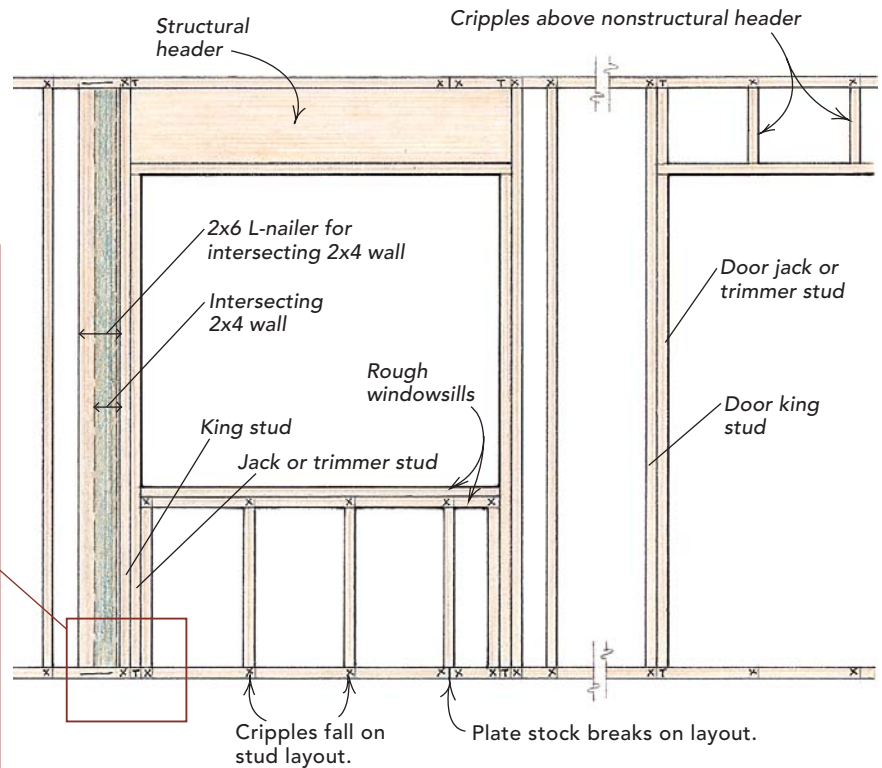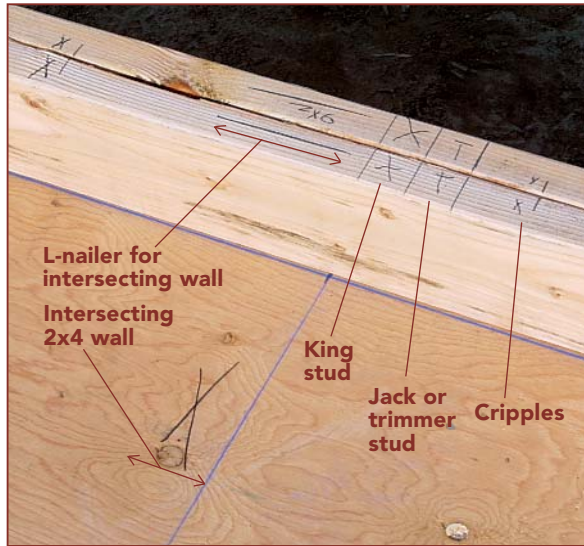

Spell out what you need on the wood

Mark key areas where studs might need to be left out to allow installation of things too wide to be carried through the doors, such as one-piece tub/shower units.

gether with just a few 8d nails to keep the plates held together and in place.

Window, door and stud layout at last

When all the exterior plates are in place, it's finally time to lay out the actual framing members. I always start with the rough openings for windows and doors. Most plans specify these openings as being a measured distance from the building corner to the center of the opening, which works fine. You can allow for the sheathing thickness or not, but once you choose, be consistent, especially if openings such as windows have to align vertically from floor to floor. Obviously, if an opening such as a bay window or a front door is to be centered on a wall, center it using the actual dimensions of the building, which may differ slightly from the plan.

Rough openings are a subject worthy of their own article, but in a nutshell, I measure half the width of the opening in both directions from the center mark. I then use a triangular square to mark the locations of the edges of trimmers and king studs, still working from the inside of the opening out. Various other marks, such as Xs or Ts, identify the specific members and their positions (drawing facing page).

Next, I mark where any interior-wall partitions intersect the exterior wall. At this point, I just mark and label the locations; I decide how to frame for them later. I also locate and mark any columns, posts or nailers that need to go in the wall. I lay out any studs that have to go in specific locations for shelf cleats, brackets, medicine cabinets, shower valves, cabinetry, ductwork and anything else I can think of. Doing this layout now is much easier than adding or moving studs later.

Finally, I lay out the common studs on the plates. Studs are commonly spaced either 16 in. or 24 in. o. c. to accommodate standard building products. By doing the common-stud layout last, I often can save lumber by using a common stud as part of a partition nailer. I almost never skip a stud because it's close to another framing member, which, I've learned the hard way, almost always causes more work than it saves. I occasionally shift stud or nailer locations to eliminate small gaps and unnecessary pieces. I keep the plywood layout in mind here, though, so that I can use full sheets of sheathing as much as possible.

Inside walls go more quickly

Once the exterior walls are built and standing, I cut the interior-wall plates and set them in place. Where two walls meet, I decide which one will run long to form the corner so that the walls can be built and raised without being moved. Also, facing a corner in a particular direction often provides better backing for interior finishes, such as handrails or cabinetry, and sometimes is necessary to accommodate such things as doorways or multiple-gang switches.

When the plates are cut and set in place, I do the stud layout. Just as with the exterior walls, I do the openings first, then nailers and specific stud and column locations. Next, I mark the locations of intersecting walls and finally overlay the common-stud layout on the plates.

Where walls come together

Where one wall meets the middle of another, I use a partition post if the situation dictates it, but more often, I opt for an L-nailer. To make an L-nailer, I use a wider stud on the flat next to a common stud whenever possible. It's faster and easier; it accommodates more insulation; and it saves the subs from drilling through those extra studs and nails. If I use U-shaped partition posts (a stud or blocks on the flat flanked

Two quick layout tips

LAYING OUT MULTIPLES

For things such as short closet wall plates, line them up and draw two walls' worth of layout lines at once (photo left).

COPY THE LAYOUT FROM THE PLATE

To mark the cripple layout on the rough windowsill, just line it up on the plate and copy the layout (photo below).



by two other studs) in an exterior wall, I need to make sure to fill the void created by the partition post with insulation before the sheathing goes on.

With the interior plates all there, we can nail in the studs, raising walls as we go. I mark key areas where studs should be crowned or specially selected, such as areas with long runs of cabinetry, and also studs that might need to be left out to allow installation of things too wide to be carried through the doors. I also nail double top plates to as many walls as possible if they don't interfere with the lifting process. □

John Spier and his wife, Kerri, own Spier Construction, a custom building company on Block Island, RI. Photos by Roe A. Osborn.